




Master controllers with EC exit

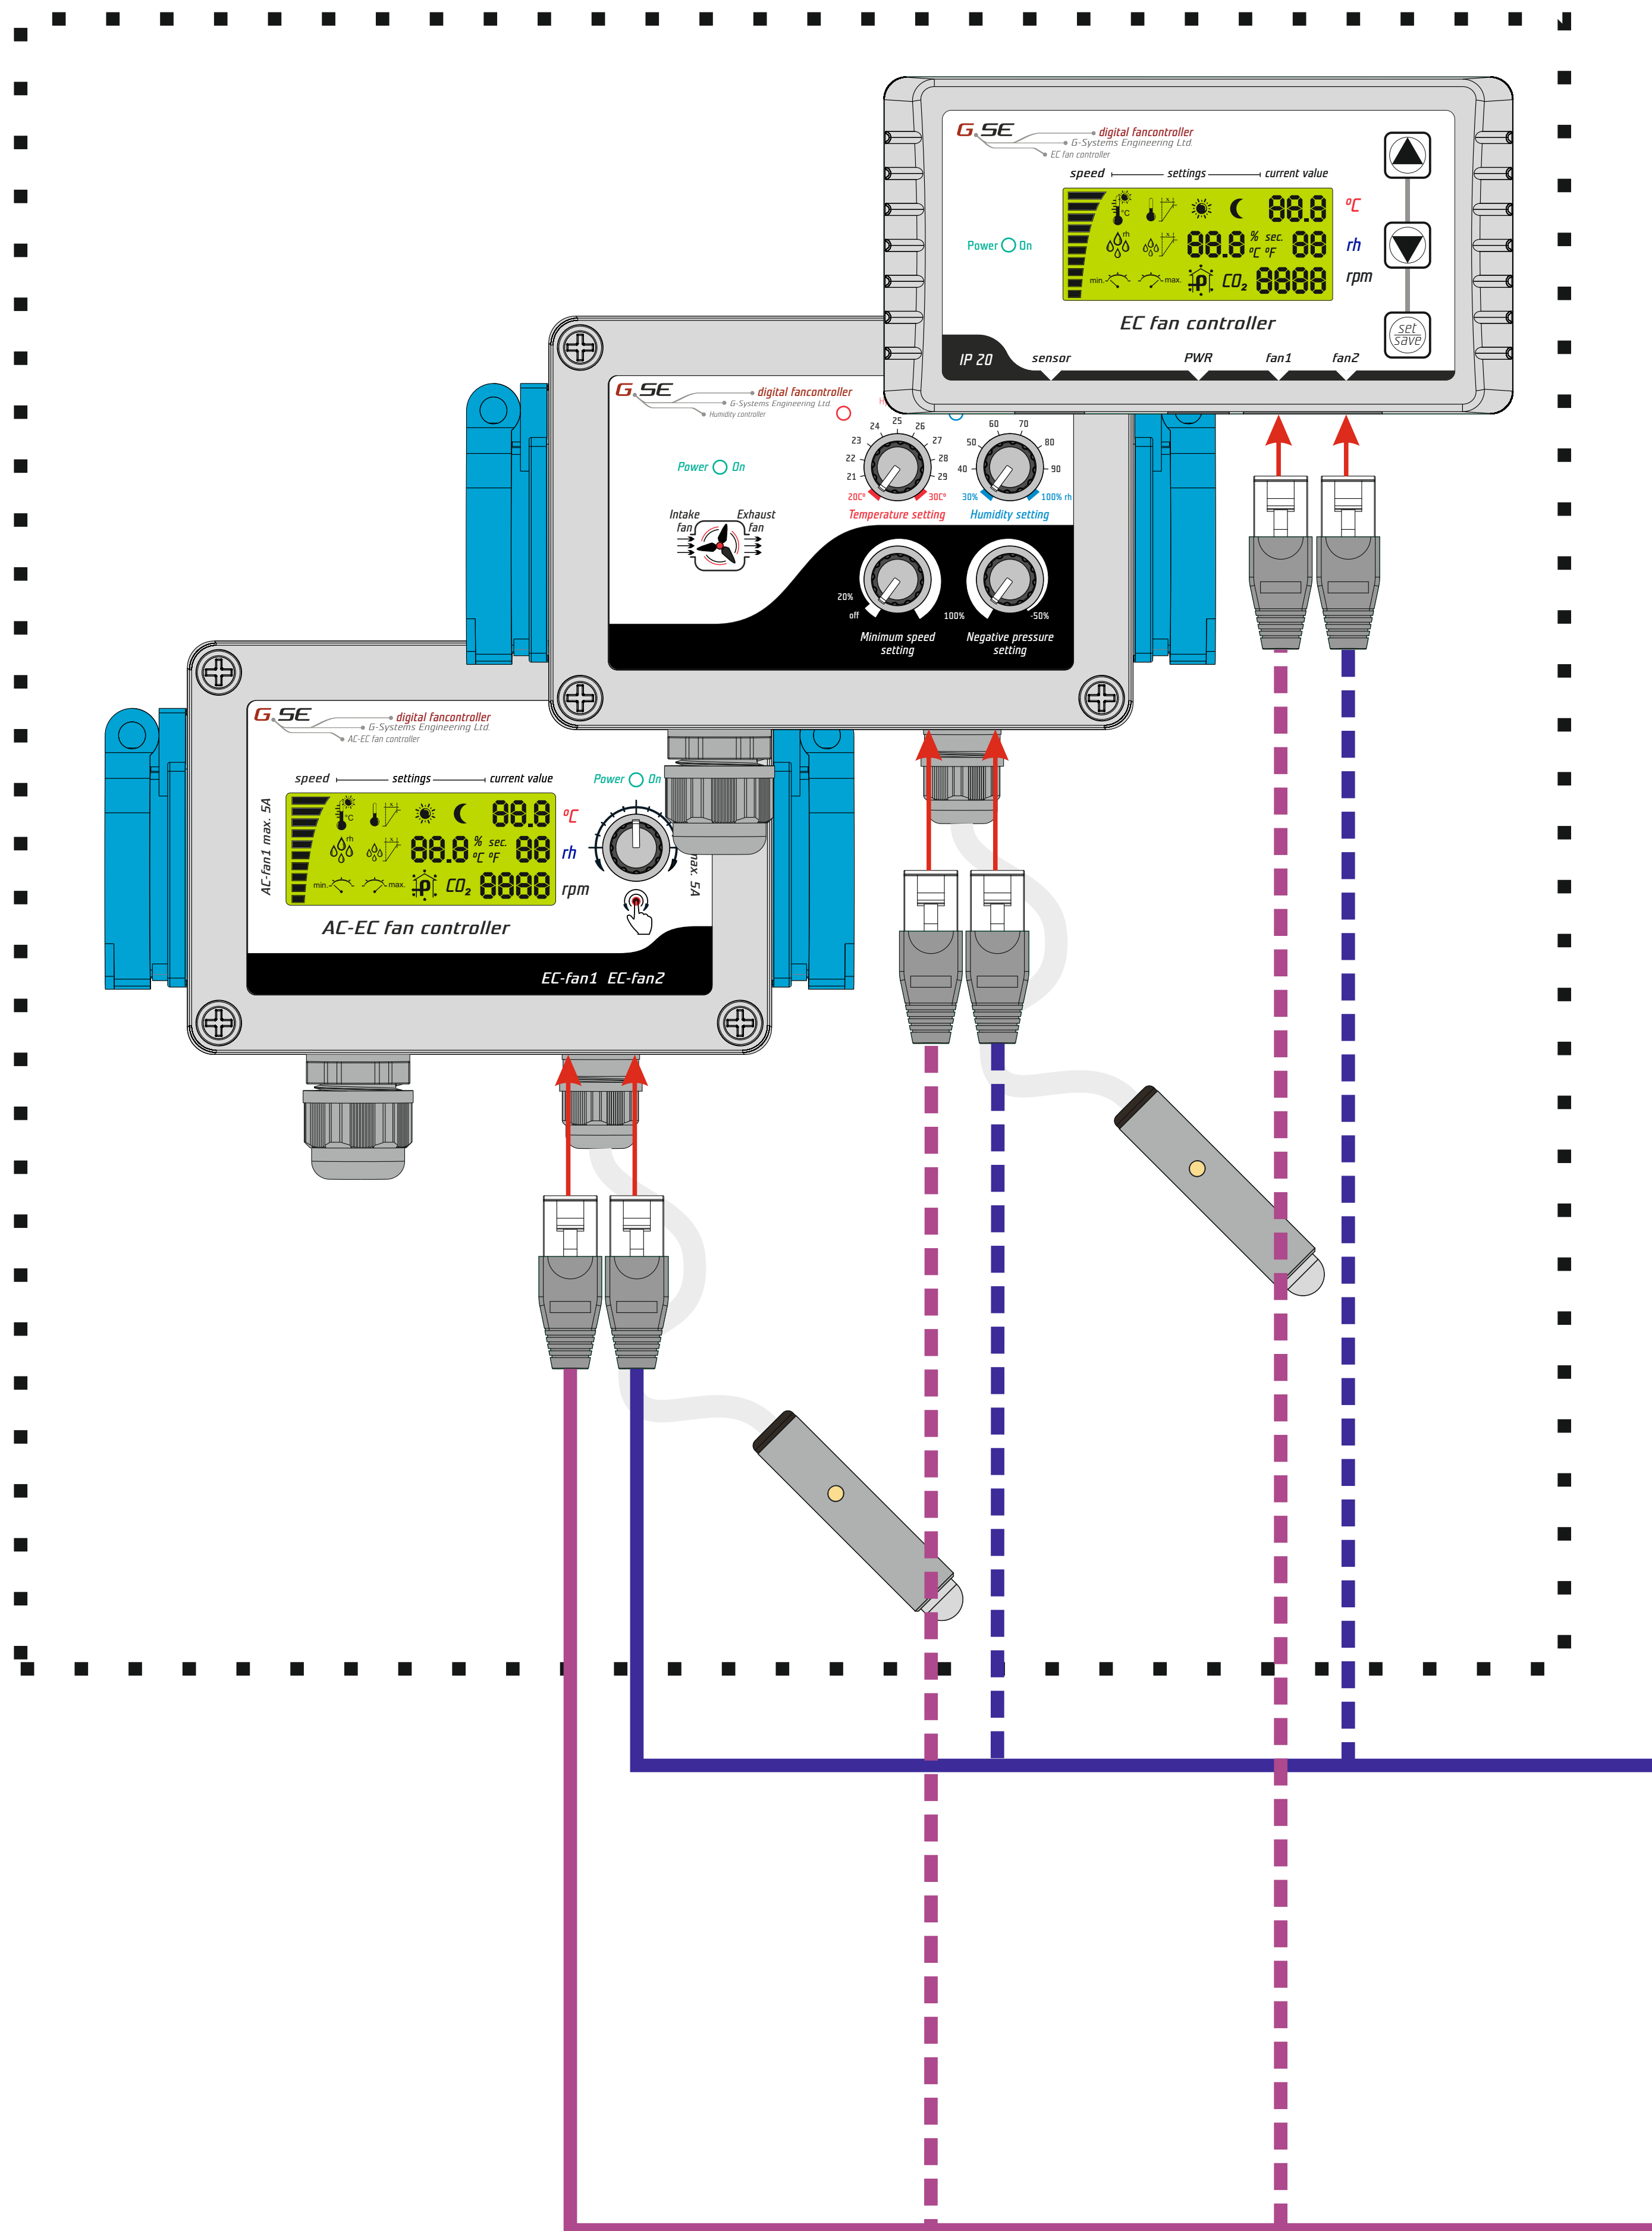

Exhaust air fan satellite (slave controllers)

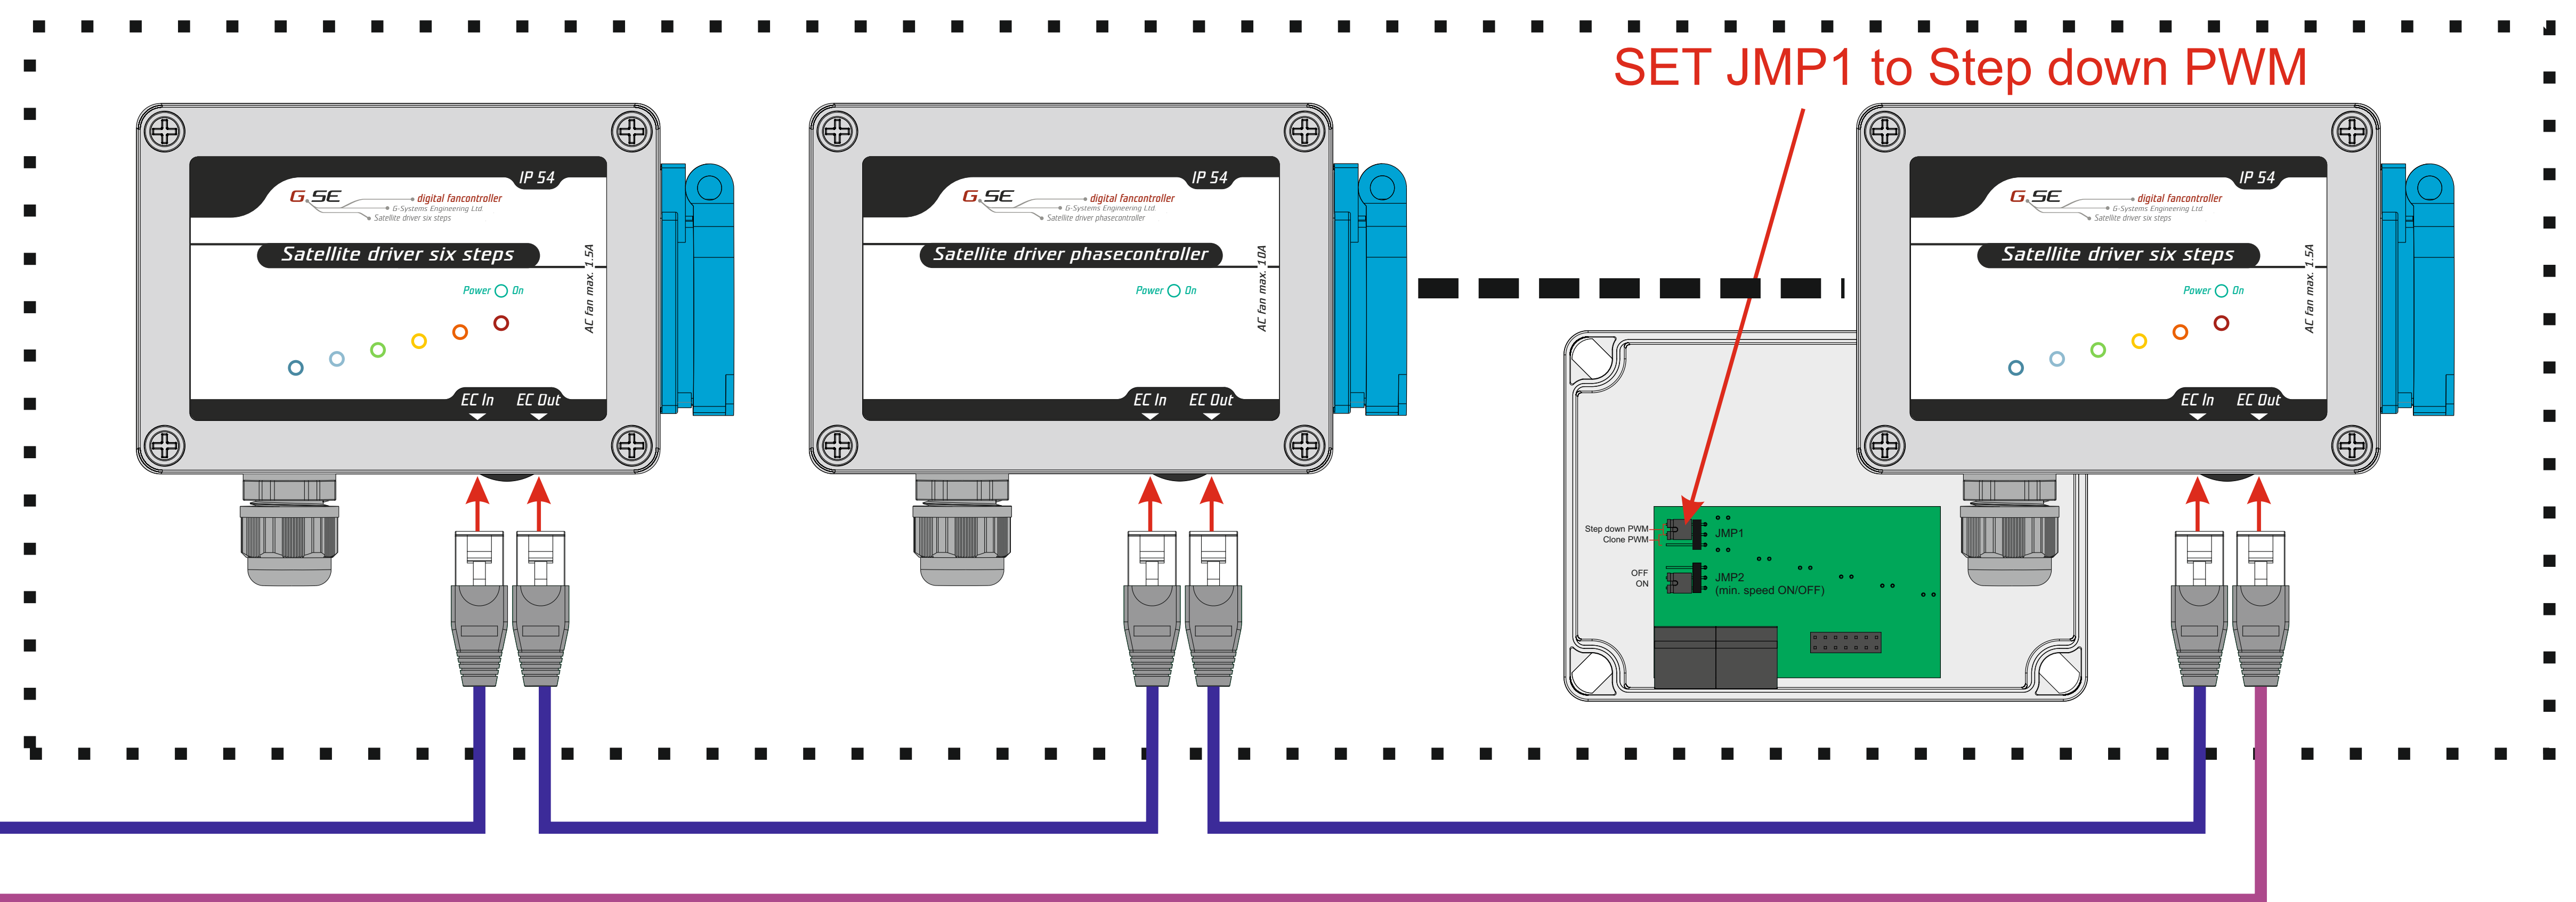

Intake air fan satellite (slave controllers)

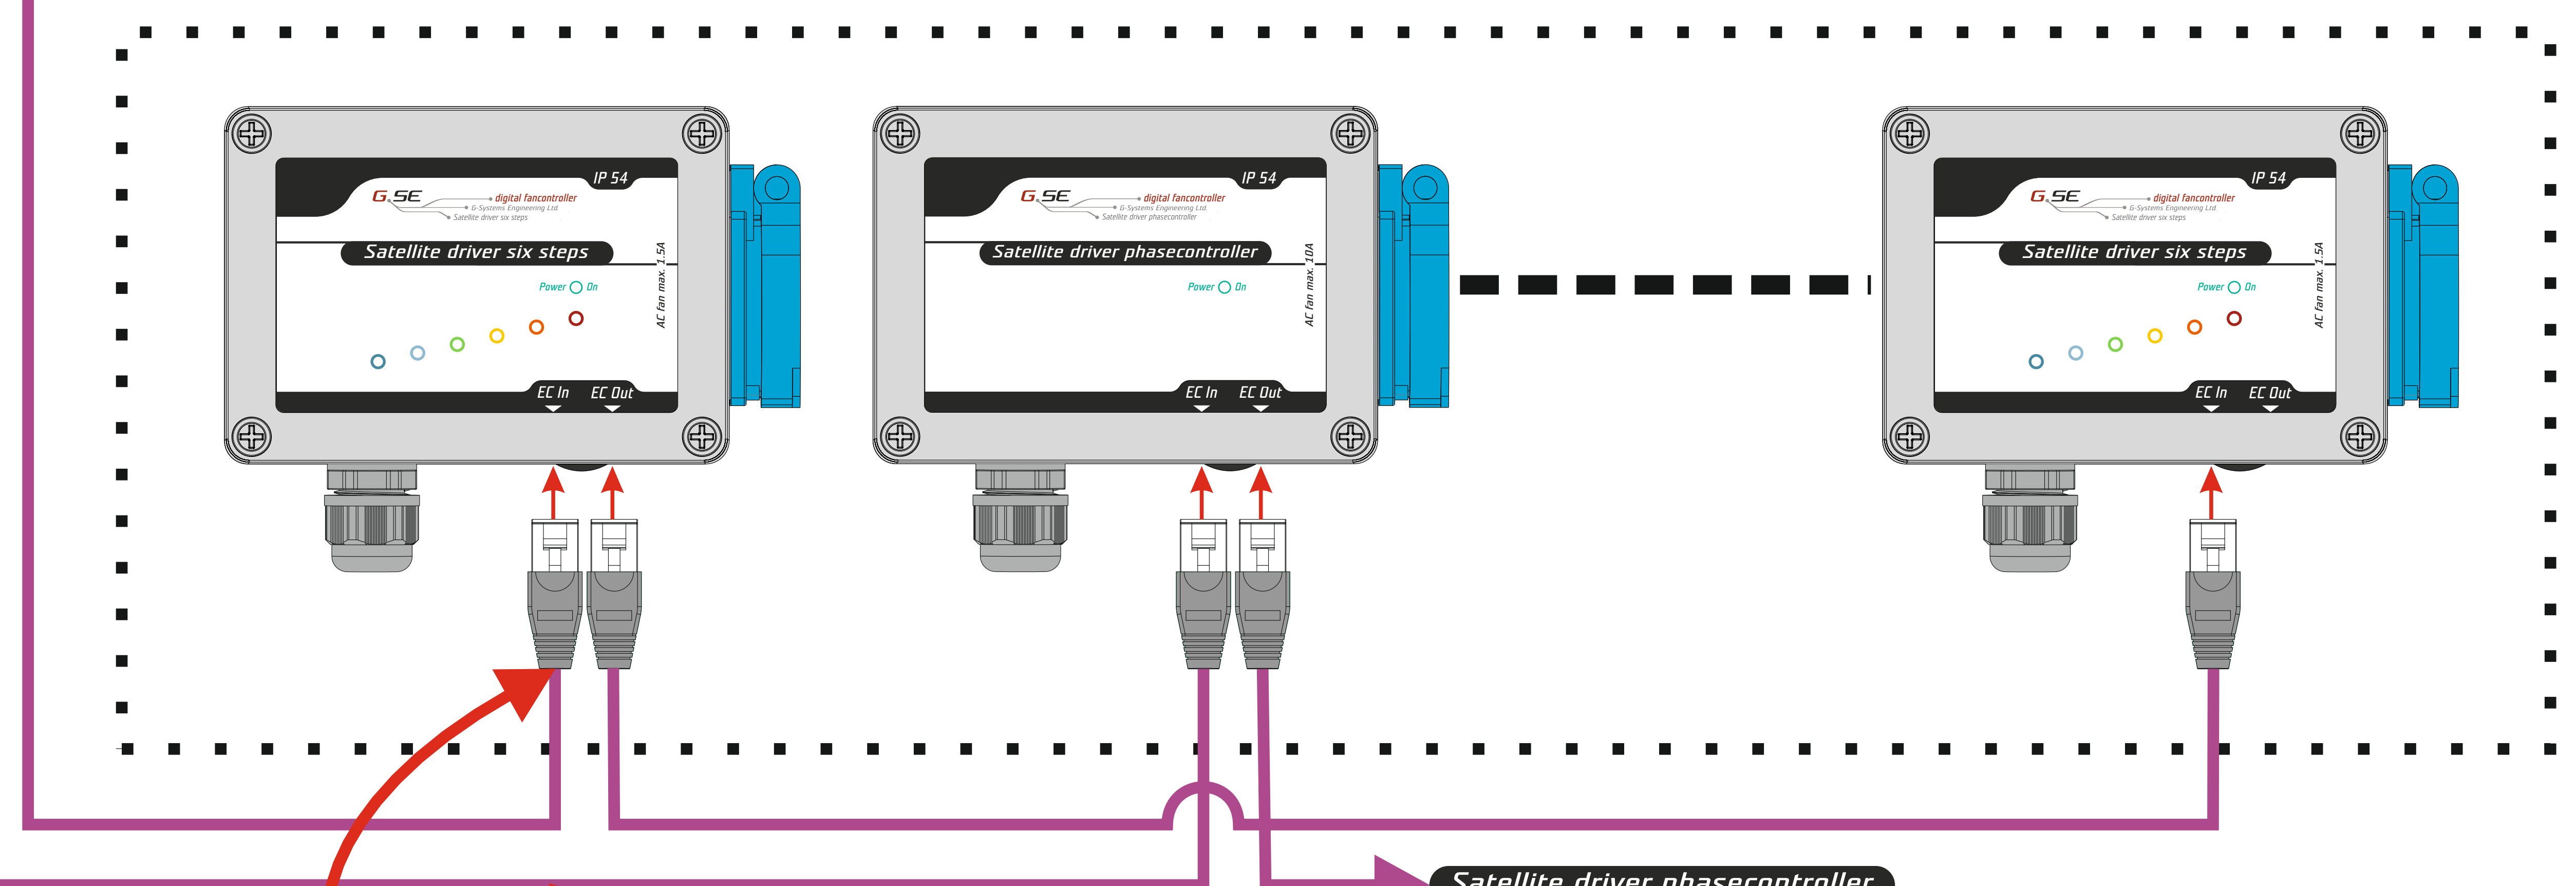

!!! Do not connect 6 step driver to master intake air fan
(It wont switch synchron with the exhaust air fan)

